




ASSEMBLY INSTRUCTION

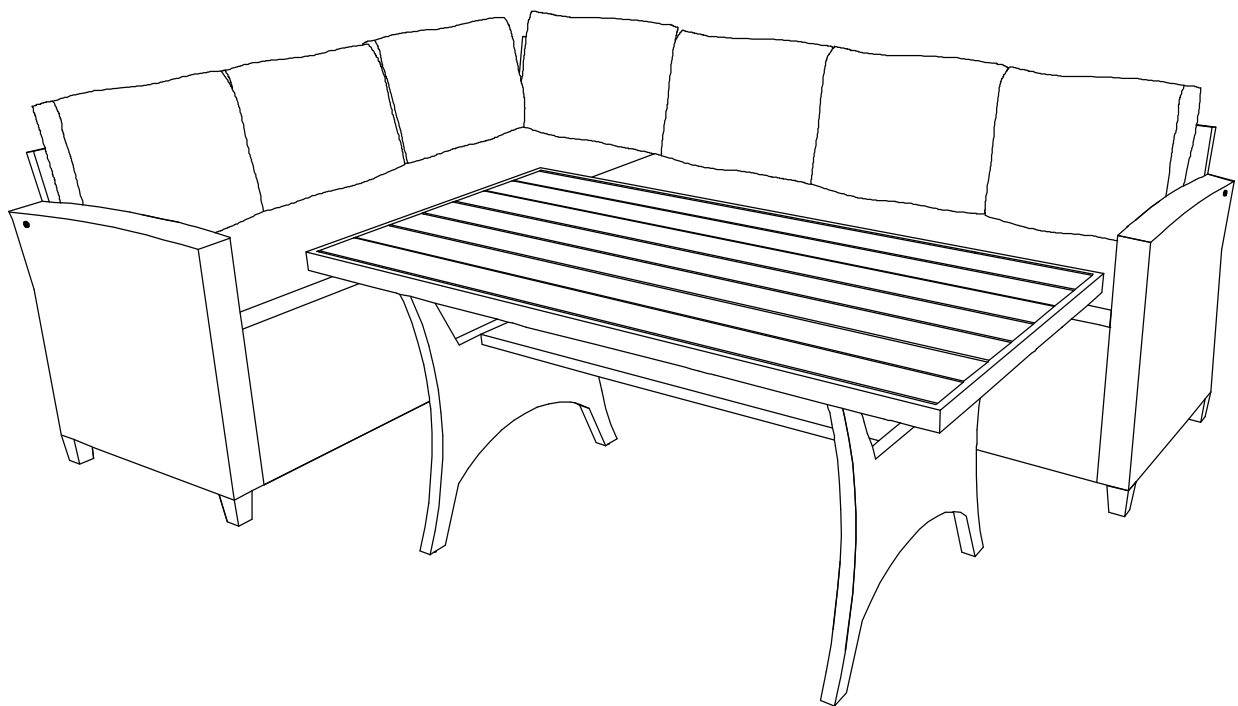


MODEL 1

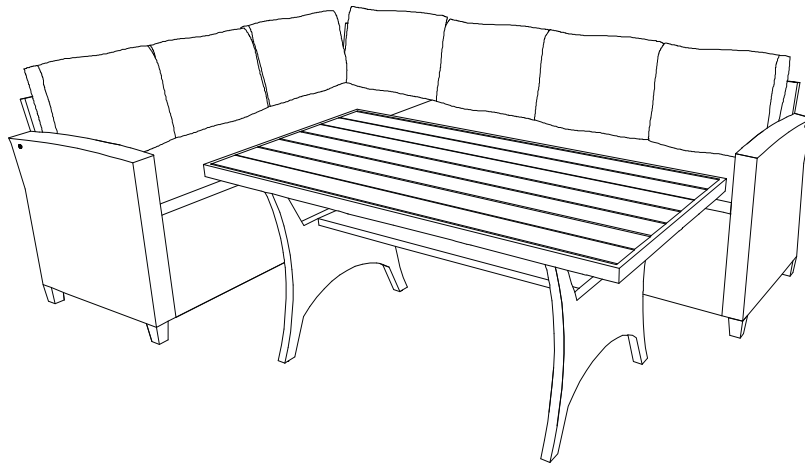




MODEL 2

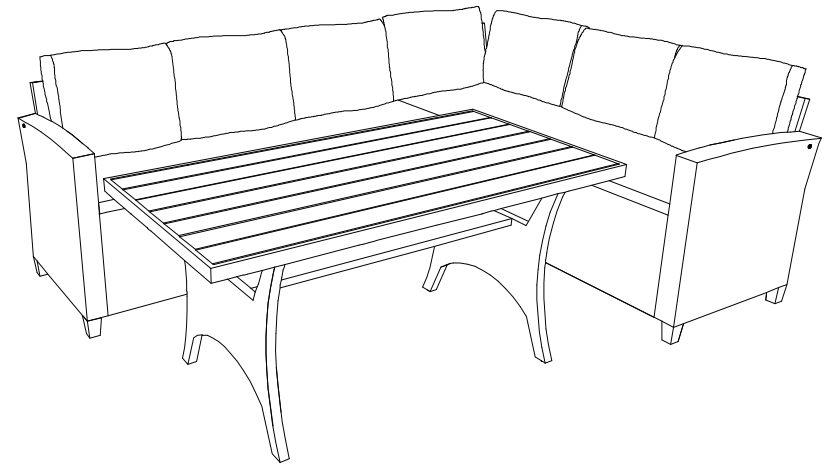










BOX 1/3

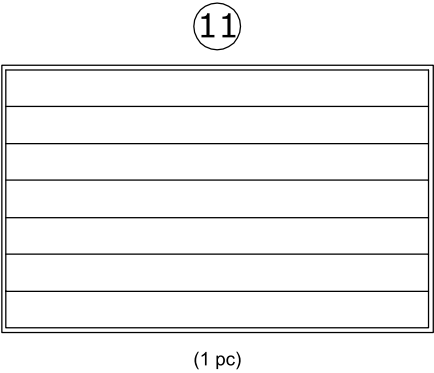


BOX 2/3

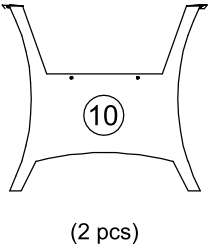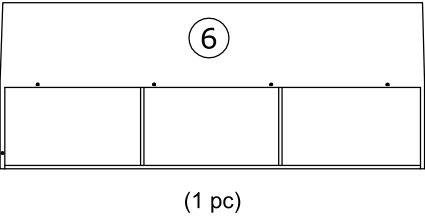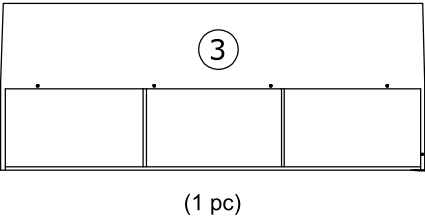


BOX 3/3

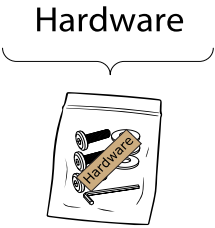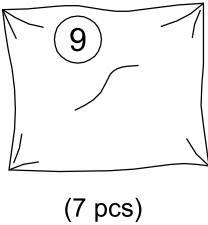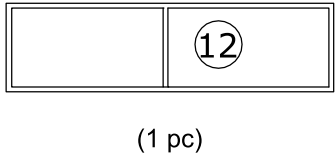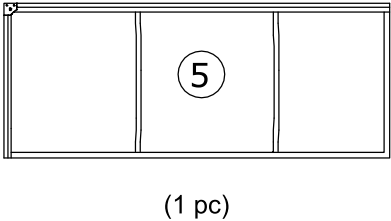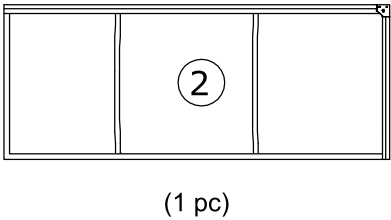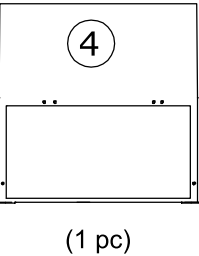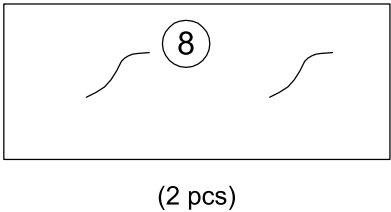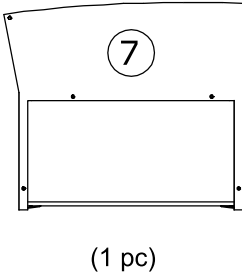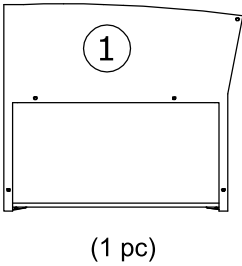


MODEL 1

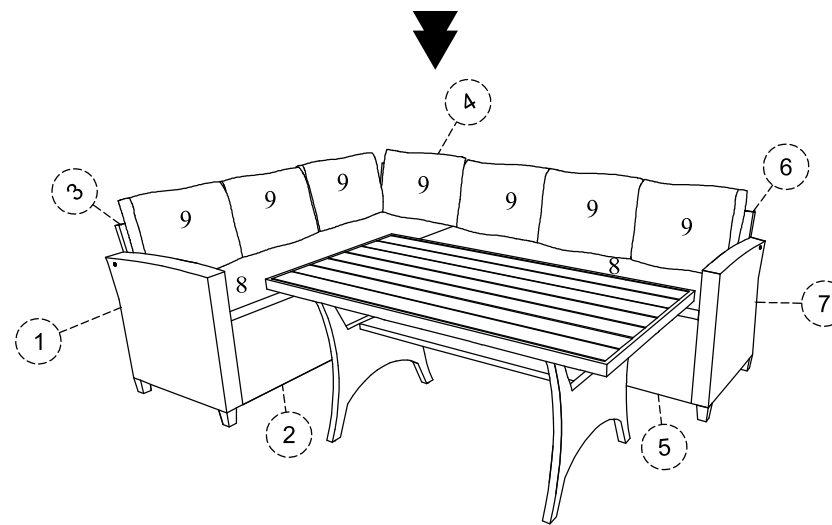


1	2	3	4	5	6	7	8	9	10	11	12
											
1 pc	1 pc	1 pc	1 pc	1 pc	1 pc	1 pc	2 pcs	7 pcs	2 pcs	1 pc	1 pc

A	B	C	D	E	F	G	H	I
								
M6x40 mm	M6x110 mm	M6x55 mm	Ø16X1 mm				M6x30 mm	M6x15 mm
25 pcs	2 pcs	8 pcs	36 pcs	8 pcs	2 pcs	3 pcs	1 pc	8 pcs

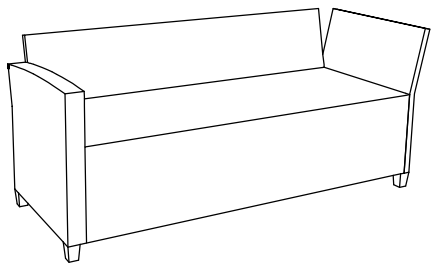

Ⓐ x12
M6x40

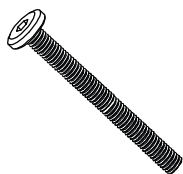


Ⓑ x01
M6x110



Ⓒ x04
M6x40



Ⓓ x14
Ø16x1



Ⓔ x04




Ⓖ x01




Ⓕ x01
M6x30

ASSEMBLY INSTRUCTION


Step 1

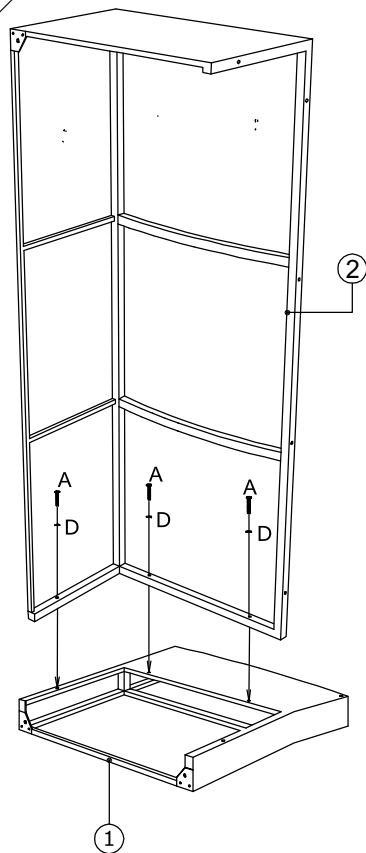


Step 2

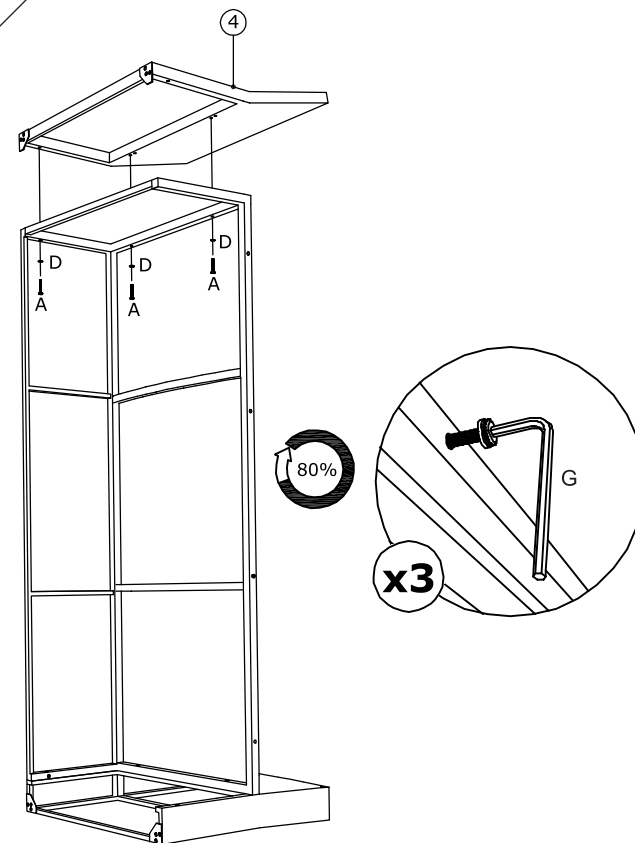


1/2

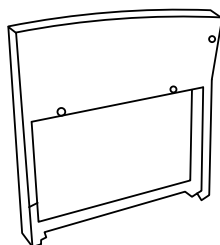


① x1

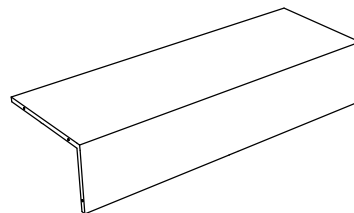

② x1

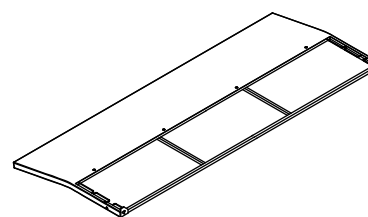


③ x1

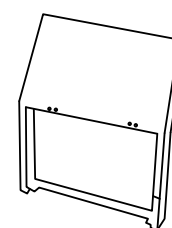


④ x1


Step 3

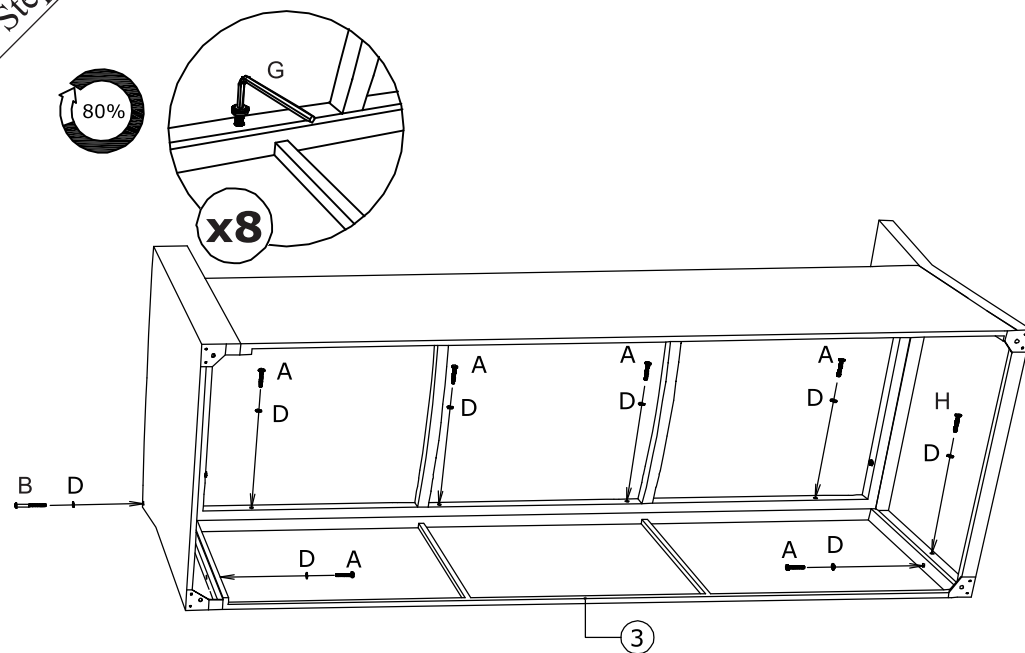


Step 4

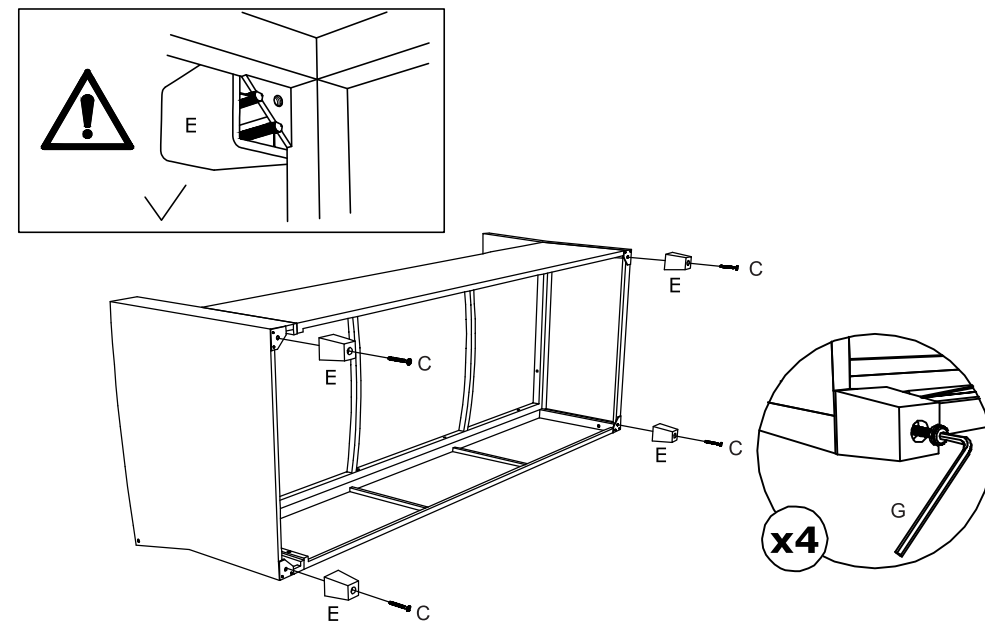


Step 5

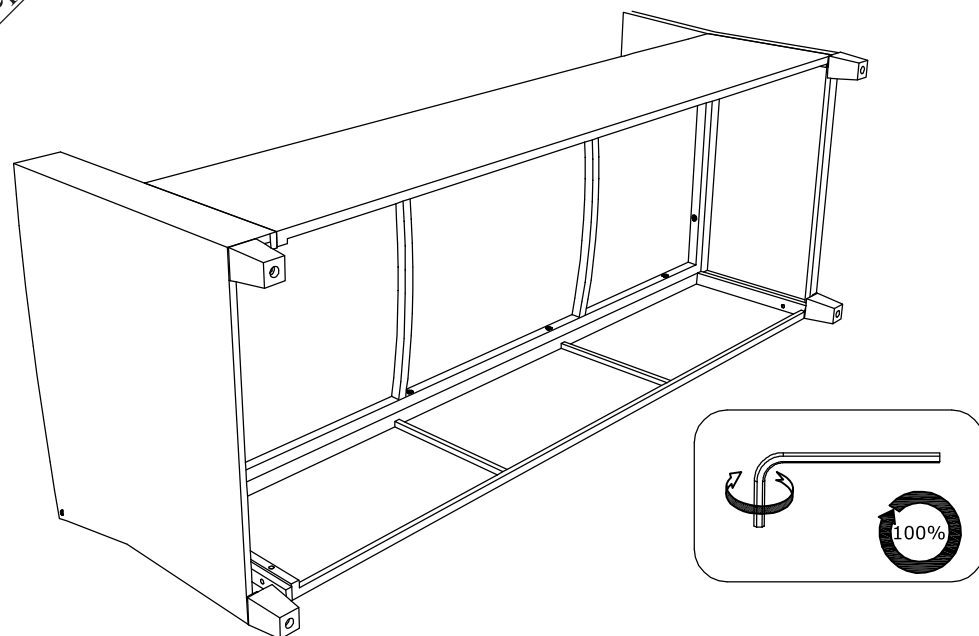



Finish

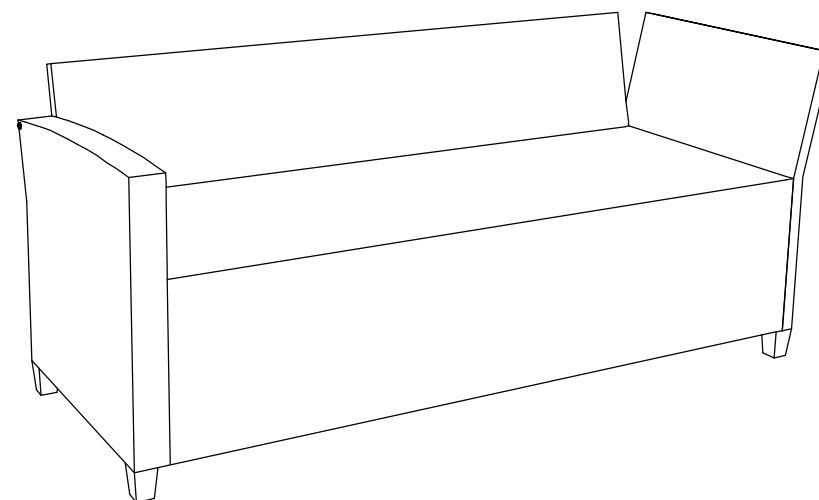


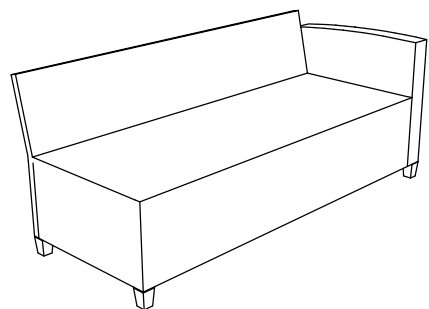


ASSEMBLY INSTRUCTION

Step 1

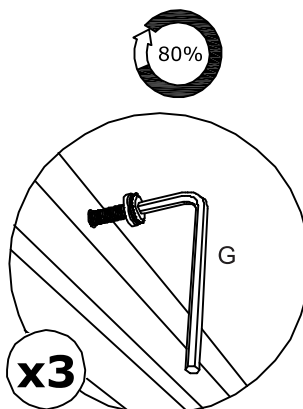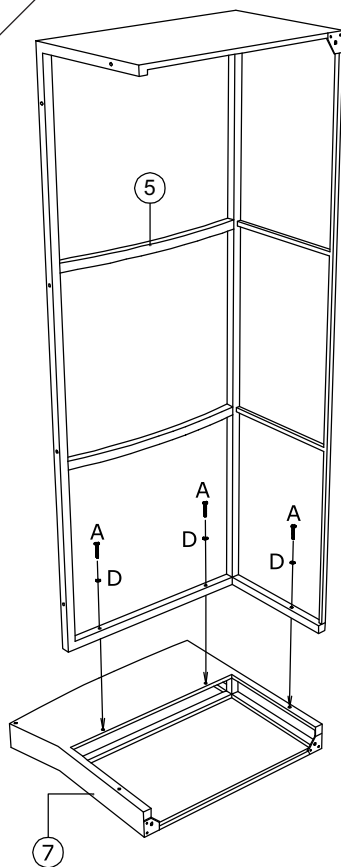


Step 2

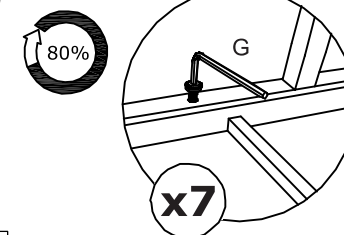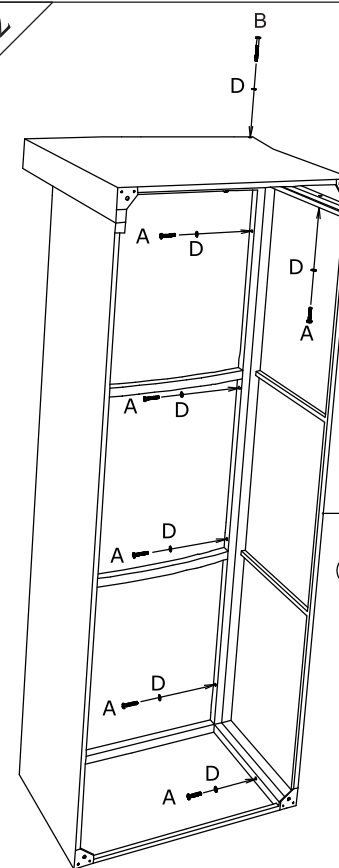

1/2



Ⓐ x09
M6x40

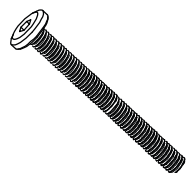


Ⓑ x01
M6x110



Ⓒ x04
M6x40




Ⓓ x10
Ø16x1

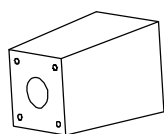


Ⓔ x04




Ⓖ x01

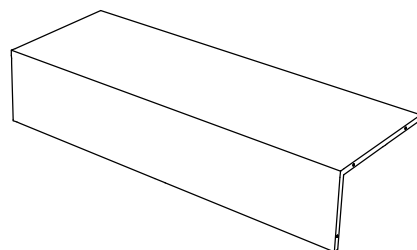

Ⓗ x1


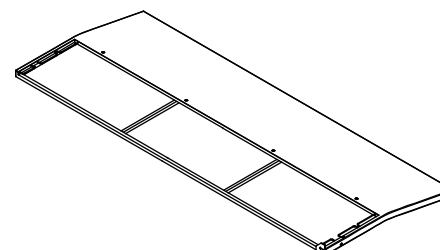


Ⓖ x1


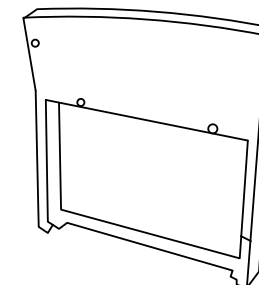


Ⓙ x1


Step 3

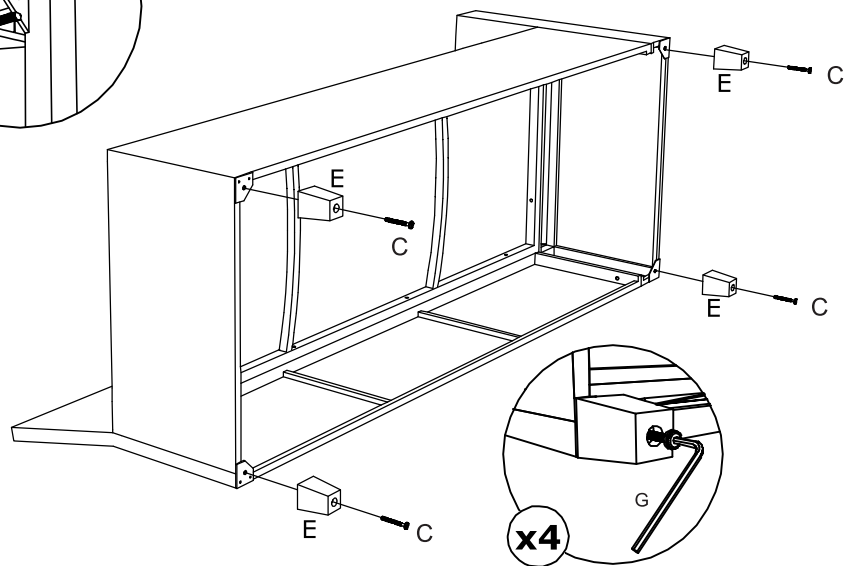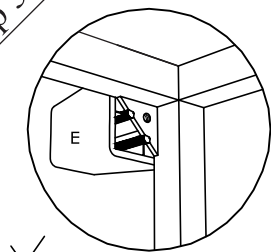




Step 4

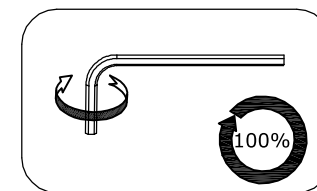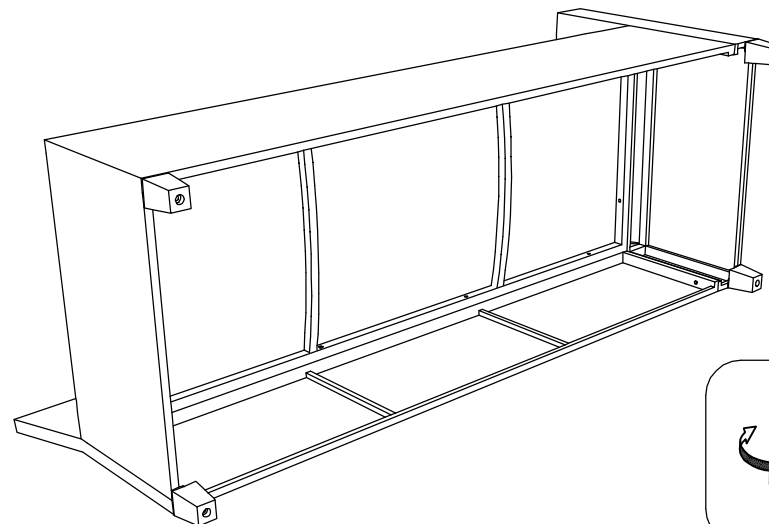

Finish

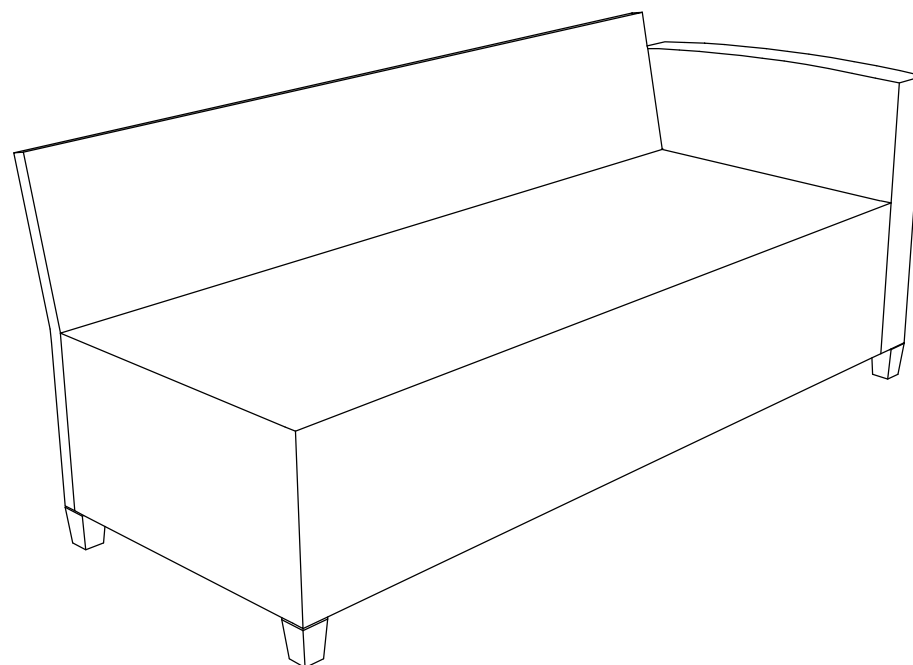


ASSEMBLY INSTRUCTION

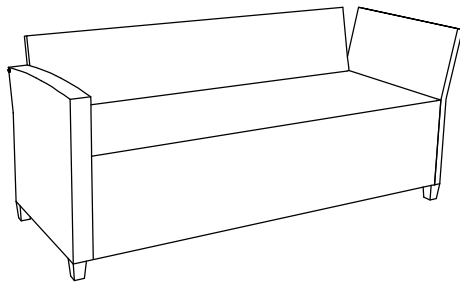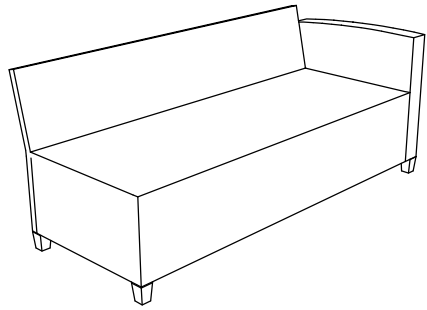

(8) x02




(9) x07

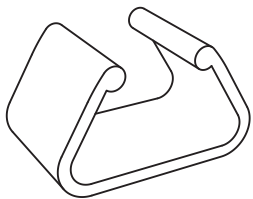


(F) x02


Step 1

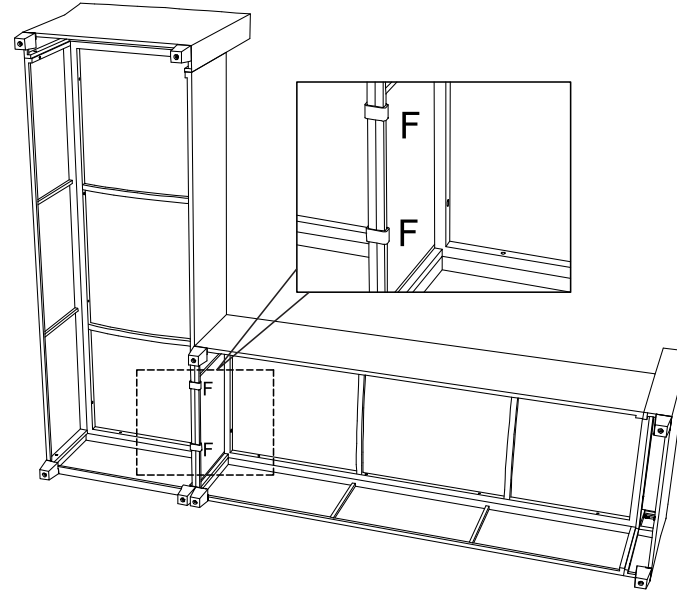


Step 2

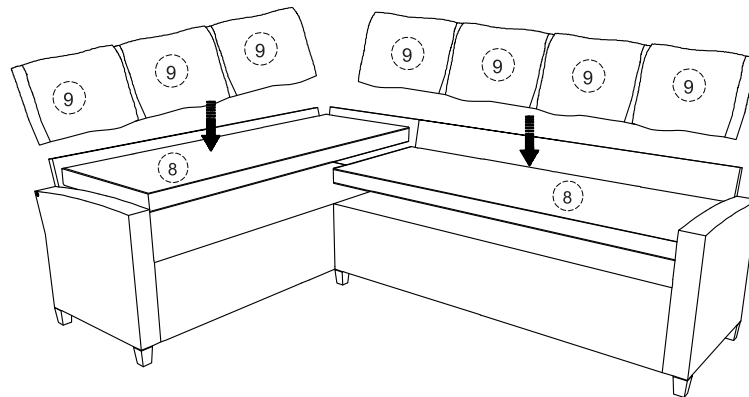



Finish

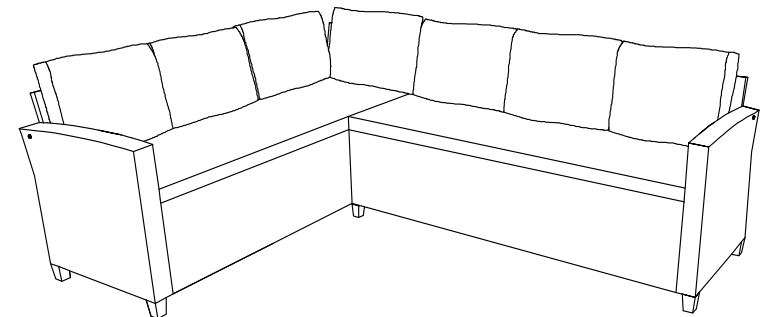


MODEL 2

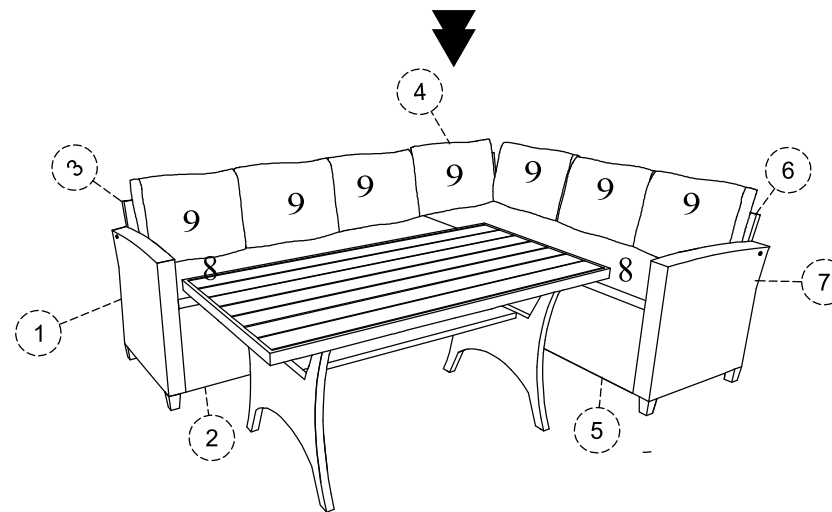


1	2	3	4	5	6	7	8	9	10	11	12
											
1 pc	1 pc	1 pc	1 pc	1 pc	1 pc	1 pc	2 pcs	7 pcs	2 pcs	1 pc	1 pc

A	B	C	D	E	F	G	H	I
								
M6x40 mm	M6x110 mm	M6x55 mm	Ø16X1 mm				M6x30 mm	M6x15 mm
25 pcs	2 pcs	8 pcs	36 pcs	8 pcs	2 pcs	3 pcs	1 pc	8 pcs

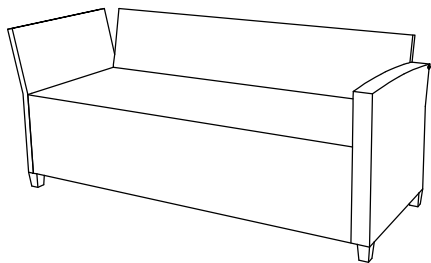

Ⓐ x12
M6x40

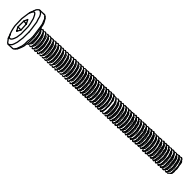


Ⓑ x01
M6x110



Ⓒ x04
M6x40



Ⓓ x14
Ø16x1



Ⓔ x04




Ⓖ x01




Ⓕ x01
M6x30

ASSEMBLY INSTRUCTION


Step 1

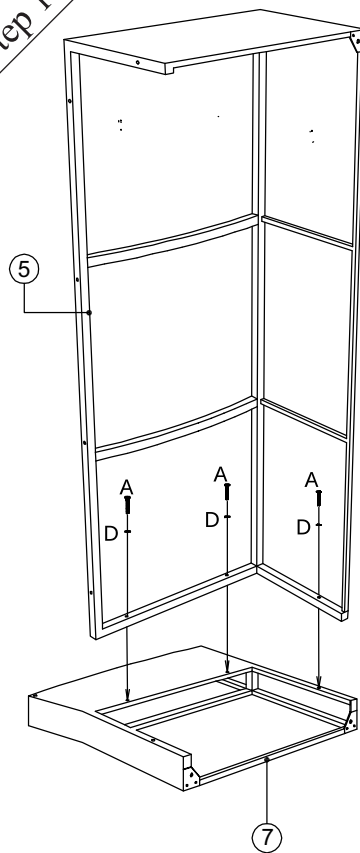


Step 2

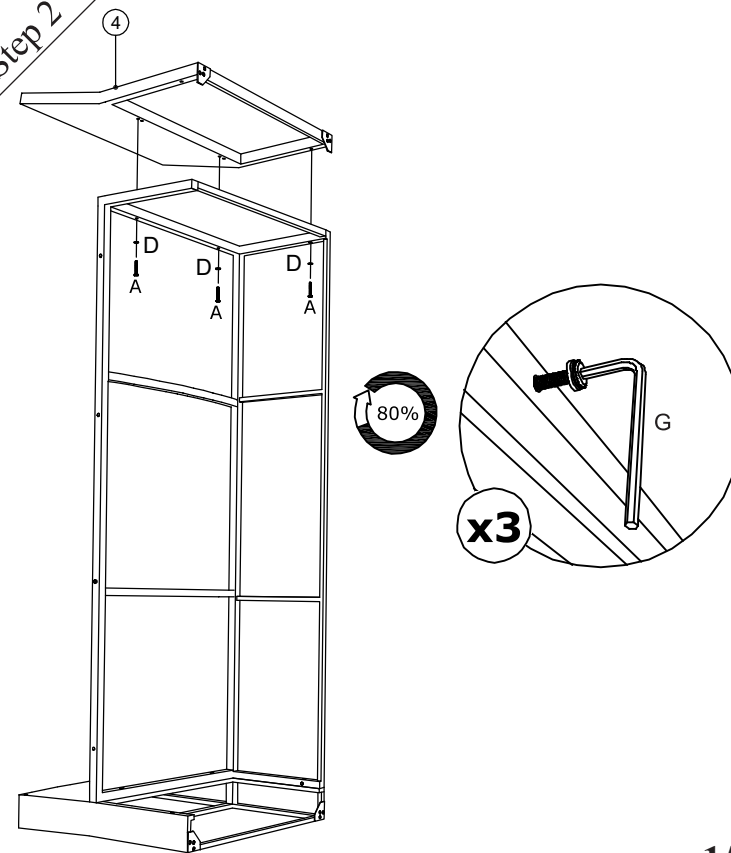


1/2

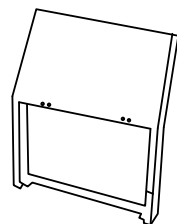


④ x1

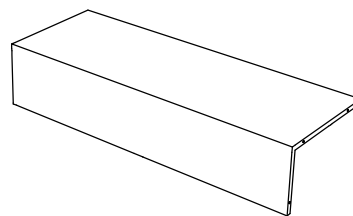

⑤ x1

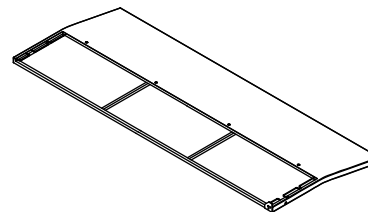



⑥ x1

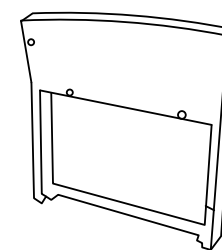



⑦ x1

Step 3



80%

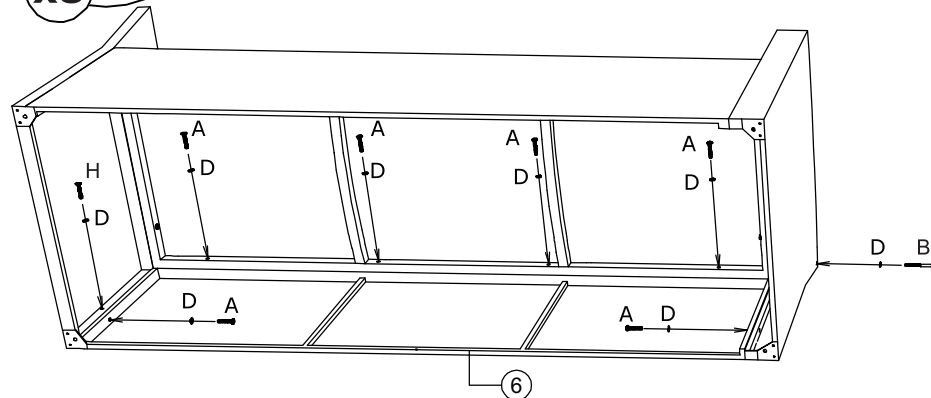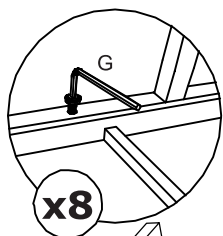


Step 4

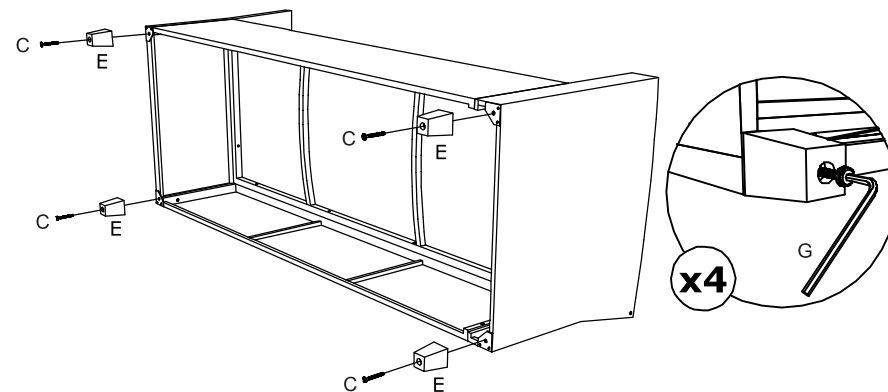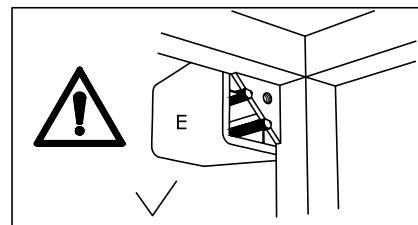


Step 5

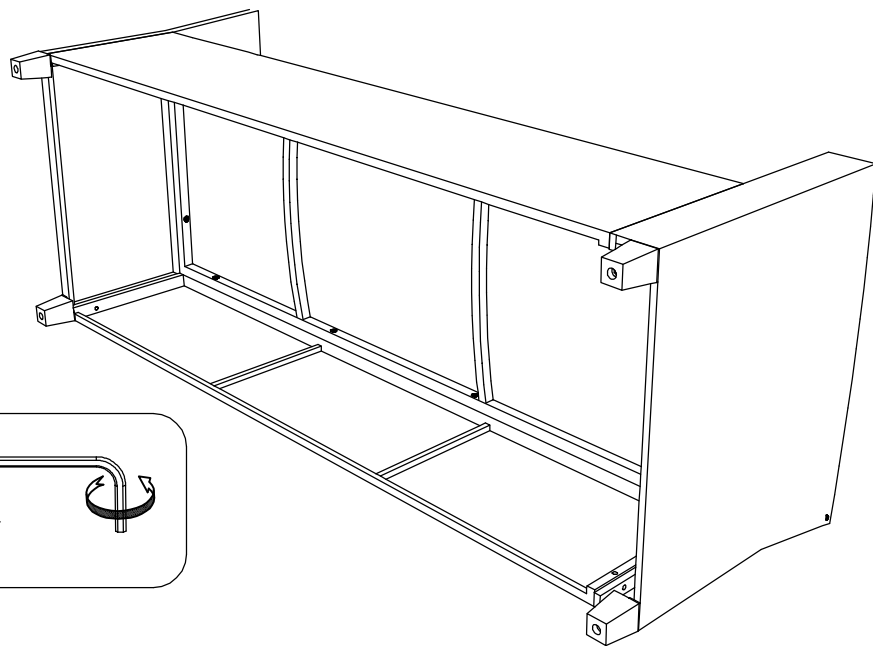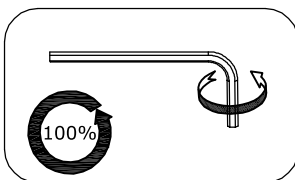


Finish

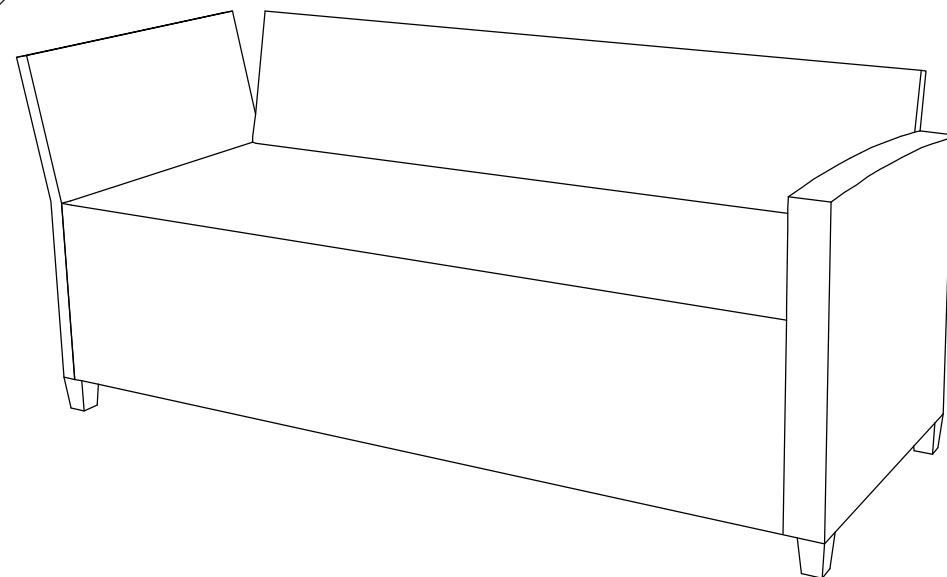

ASSEMBLY INSTRUCTION

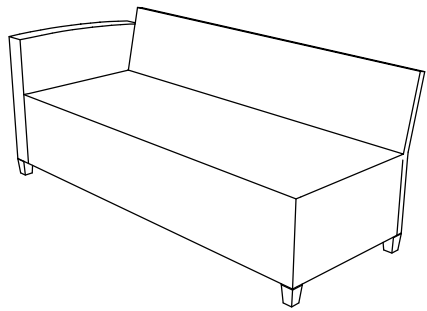


Ⓐ x09
M6x40

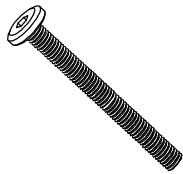


Ⓑ x01
M6x110



Ⓒ x04
M6x40



Ⓓ x10
Ø16x1

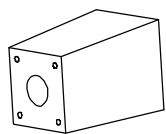


Ⓔ x04





Ⓖ x01


Step 1

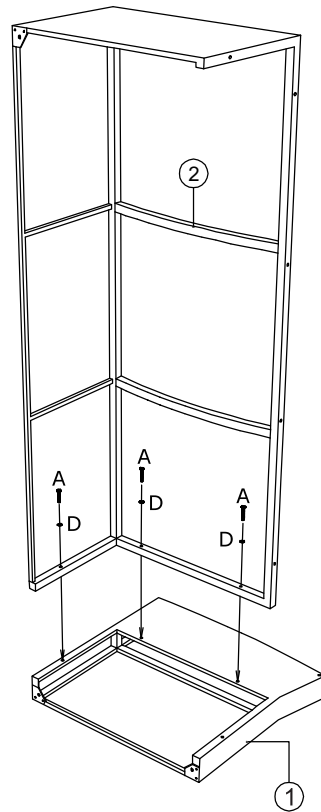


Step 2

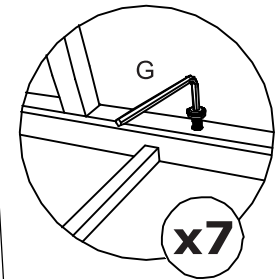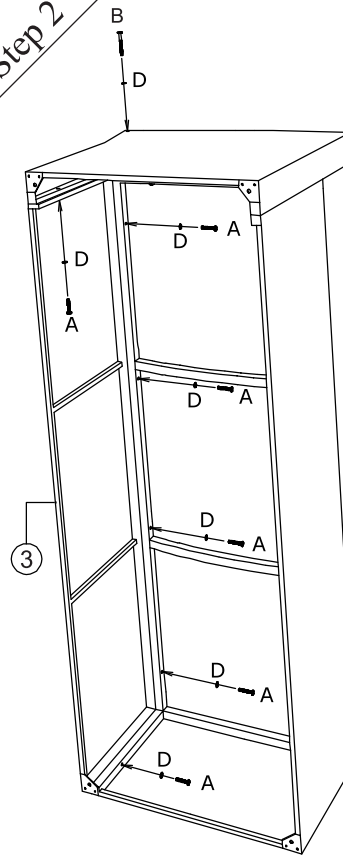


1/2

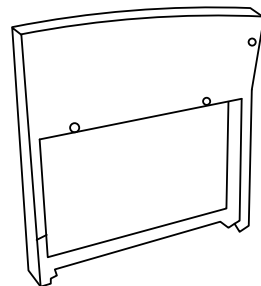

① x1

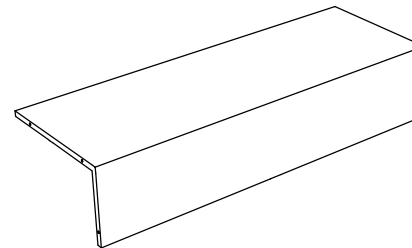


② x1

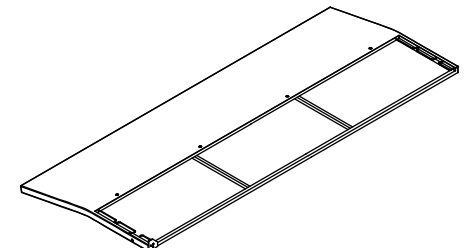


③ x1


Step 3

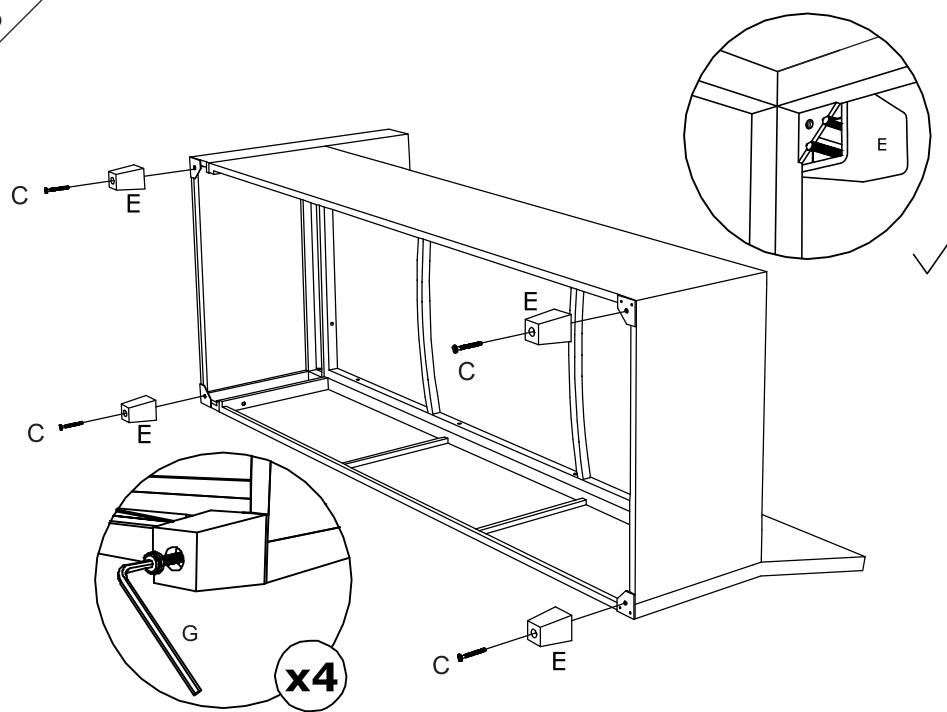




Step 4

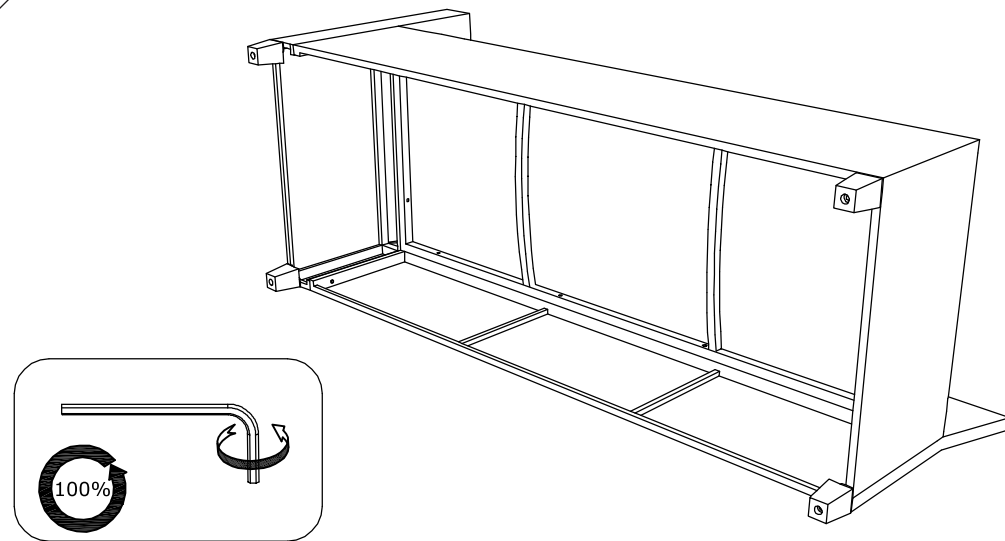

Finish

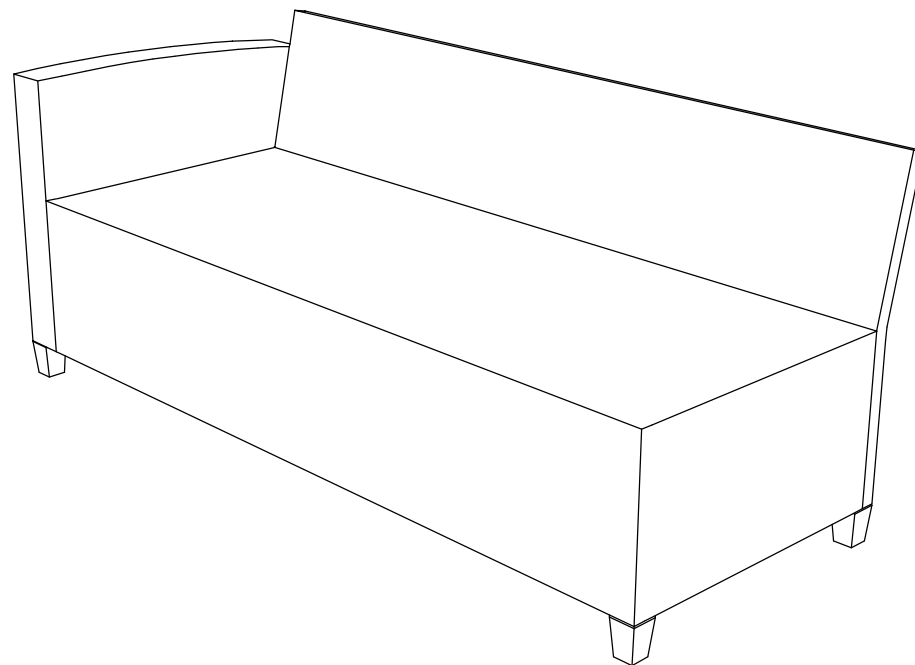


ASSEMBLY INSTRUCTION

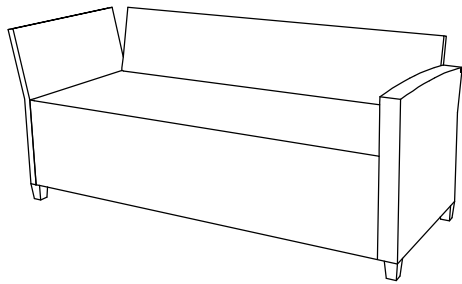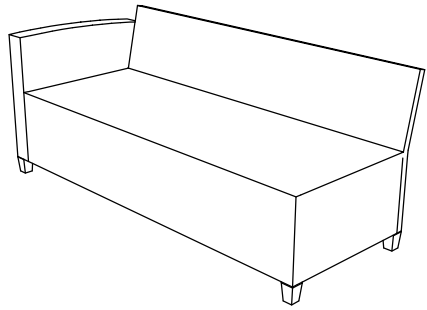

(8) x02




(9) x07

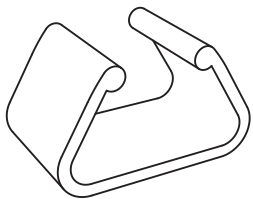


(F) x02


Step 1

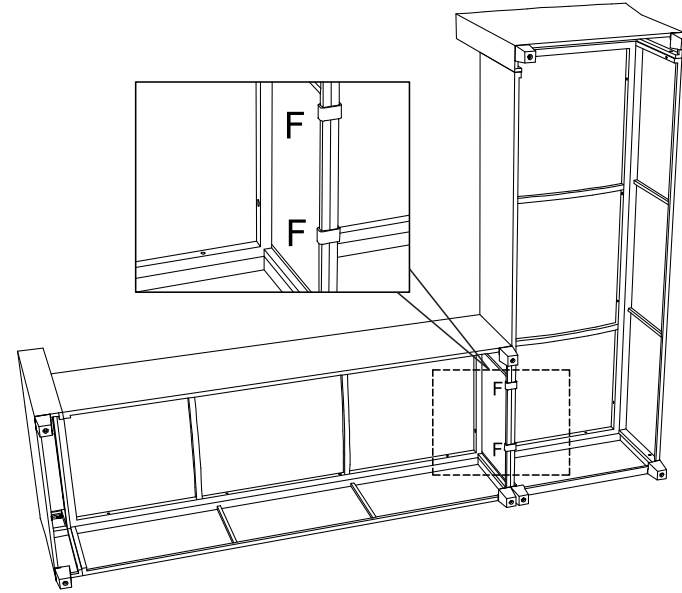




Step 2

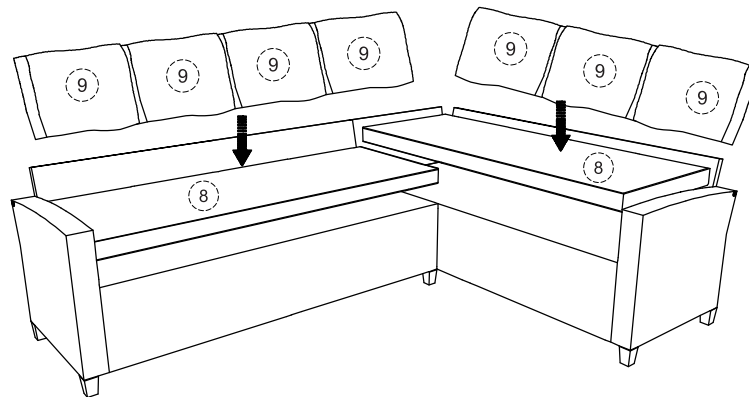


Finish

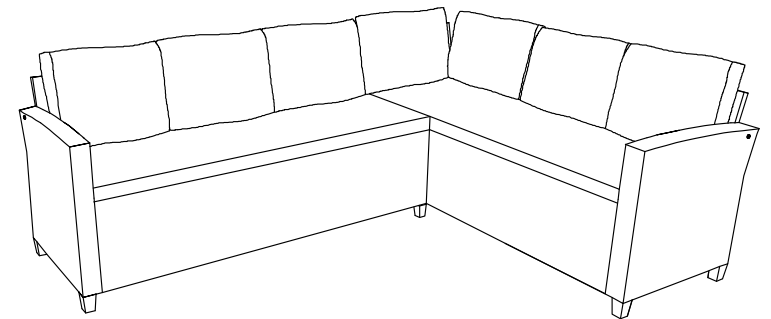

ASSEMBLY INSTRUCTION

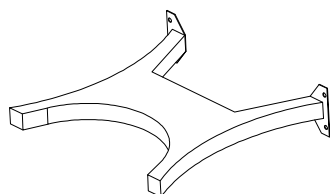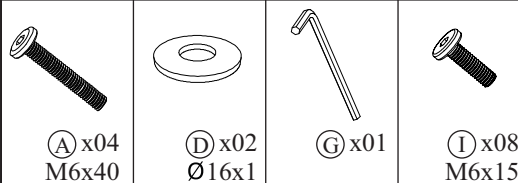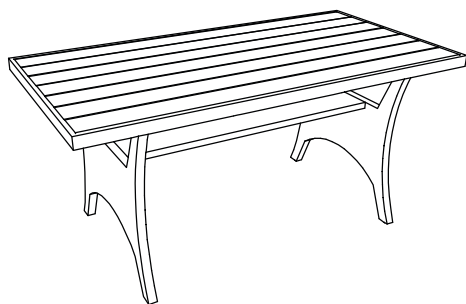

(10)x01




(11)x01




(12)x01


Step 1

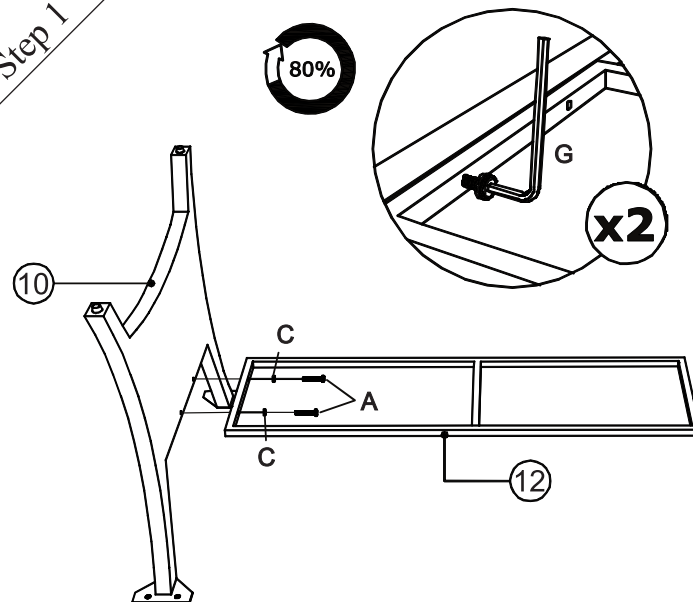

Step 2

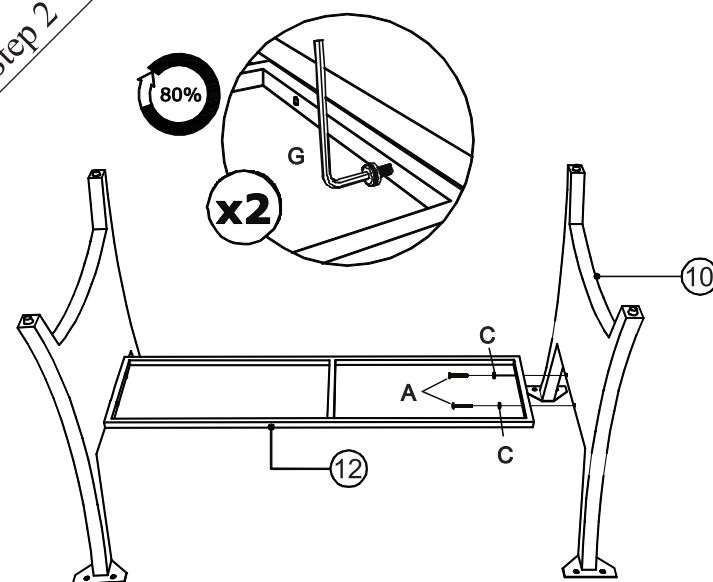

Step 3

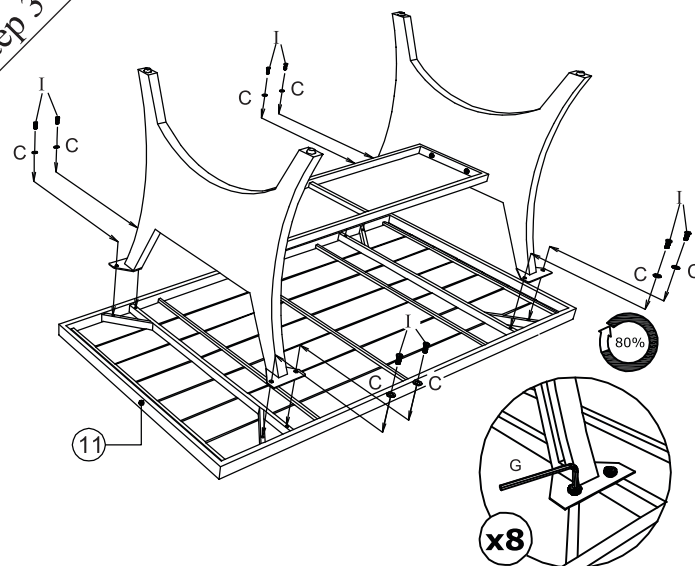

Finish

